

版本	更改日期	更改内容
V01	2026-3-28	删掉并机部分

制作说明：A4对折
封面纸质：铜板纸
黑白印刷

USER MANUAL

Hybrid

Solar Inverter

MFUZOP



7. Technical datasheet

Model		MF4855U
Input	Input Sources	L+N+PE
	Rated Input Voltage	110/120VAC
	Voltage Range	65-145VAC±3V
	Frequency	50/60Hz±0.1%
Output	Rated power	The battery inverts 5500W
		Photovoltaic inverter 5500W
	Output Voltage	110/120VAC±5%
	Output Frequency	50/60Hz±0.1%
	Waveform	Pure Sine Wave
	Transfer Time (adjustable)	Computers(UPS Mode)10ms, Appliance(APL Mode)20ms
	Peak Power	11000VA
	Overload capacity	Battery mode: 11s@105%~150% Load; 2s@150%~200% Load; 400ms@>200% Load
Grid-connected operation	Output Voltage	110/120VAC
	Feed into the grid voltage range	90-140VAC
	Feed into the grid frequency range	47-53±1Hz/57-62±1Hz
	Nominal output current	50A
	Power Factor Range	>0.99
	Maximum conversion efficiency (DC/AC)	98%
Battery	Battery Voltage	48Vdc
	Constant Charging Voltage(Adjustable)	56.4Vdc
	Float Charging Voltage(Adjustable)	54Vdc
Chargers	PV Charging Mode	MPPT
	MAX.PV Input Power	8500W
	MPPT Tracking Range	60-500Vdc
	Best voltage	360~430Vdc
	MAX.PV Input Voltage	500Vdc
	PV Max Input Current	27A
	MAX.PV Charging Current	100A
	MAX.AC Charging Current	40A
Display	MAX.Charging Current	100A
	LCD interface	CAN display running mode/load/input/output, etc.
Interface	RS232	Baud Rate2400
	Extend the socket communication interface	Lithium Battery BMS Communication Card WifiCard, Dry Contact
	Parallel machine interface	Without Parallel Connect
Environments	Operating Temperature	-10-50°C
	Humidity	20%-95%(Non-condensing)
	Storage Temperature	-15-60C
	Altitude	Altitude Not Over 1000m, Derating over 1000m, Max4000m, Refer to IEC62040
	Noise	≤50db
Standards and certification		EN-IEC 60335-1, EN IEC 60335-2-29, IEC 62109-1

6. Trouble removal

Problem	LCD/LED/Buzzer	Explanation/Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication	1. The battery voltage is far too low. (<1.4V/Cell) 2. Internal fuse tripped.	1. Contact repair center for replacing the fuse. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UP-->sppliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 105% and time is up.	Reduce the connected load by switching off some equipment.
		If PV input voltage is higher than specification, the output power will be derated. At this time, if connected loads is higher than derated output power, it will cause overload.	Reduce the number of PV modules in series or the connected load.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C	
	Fault code 03	Battery is over-charged	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 95Vac or is higher than 130Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	
	Fault code 59	PV input voltage is beyond the specification.	Reduce the number of PV modules in series.

Table Of Contents

1 About This Manual.....	1
1.1 Purpose.....	1
1.2 Scope.....	1
2 Safety Instructions.....	1
3 Introduction.....	2
3.1 Features.....	2
3.2 Basic System Architecture.....	2
3.3 Product Overview.....	3
4 Installation.....	5
4.1 Unpacking And Inspection	5
4.2 Preparation	5
4.3 Mounting The Unit.....	6
4.4 Battery Connection.....	6
4.5 Ac Input/Output Connection.....	7
4.6 PV Connection.....	8
4.7 Final Assembly.....	10
5 Operation.....	10
5.1 Power On/off.....	10
5.2 Operation and Display Pane	11
5.3 LCD setting	18
5.4 Battery Equalization Description.....	27
5.5 Fault and alarm description.....	29
6 Trouble removal.....	31
7 Technical datasheet.....	32

1 About This Manual

1.1 Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations, Keep manual for future reference.

1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

2 Safety Instructions



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

- Before using the unit read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
- CAUTION-**To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
- Do not disassemble the unit Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
- To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- CAUTION-**Only qualified personnel can install this device with battery.
- NEVER** charge a frozen battery.
- For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
- Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals, Please refer to INSTALLATION section of this manual for the details
- One piece of 150A fuse is provided as over-current protection for the battery supply.
- GROUNDING INSTRUCTIONS** -This inverter/ charger should be connected to a permanent grounder wiring system. Be sure to comply with local requirements and regulation to install this inverter.
- NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
- Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

5.5.2 Alarm Descriptions

➤ **Alarm:** The red LED flashes, and the LCD displays an alarm code, the inverter does not enter the failure mode

Alarm Indicator

Alarm Code	Alarm Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	
02	Over temperature	None	
03	Battery is over-charged	Beep once every second	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
15	PV energy is low.	Beep twice every 3 seconds	
16	High AC input (>140VAC) during BUS soft start	None	
27	Max battery discharge current setting	None	
E9	Battery equalization	None	
bP	Battery is not connected	None	

5.5.3 Code Reference

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

Code	Description
60	If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.
61	Communication lost - After battery is connected, communication signal is not detected for 1 minutes, buzzer will beep. - Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.
69	If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.
70	If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.
71	If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharge battery.

5.5 Fault and alarm description

5.5.1 Faults Descriptions

➤ **Fault:** The inverter enters the fault mode, the red LED light is always on and the LCD displays the fault code.

Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	
02	Over temperature or NTC is not connected well.	
03	Battery voltage is too high.	
04	Battery voltage is too low.	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is too high.	
07	Over load time out.	
08	Bus voltage is too high	
09	Bus soft start failed	
51	Over currents or surge	
52	Bus voltage is too low	
53	Inverter soft start failed	
55	Over DC voltage in AC output	
57	Current sensor failed	
58	Output voltage is too low	
59	PV voltage is over limitation	

3 Introduction

This is a multi-function Inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

3.1 Features

- ♦ Pure sine wave inverter
- ♦ Configurable input voltage range for home appliances and personal computers via LCD setting
- ♦ Configurable battery charging current based on applications via LCD setting
- ♦ Configurable AC/Solar Charger priority via LCD setting
- ♦ Compatible to mains voltage or generator power
- ♦ Auto restart while AC is recovering
- ♦ Overload/Over temperature/short circuit protection
- ♦ Smart battery charger design for optimized battery performance
- ♦ Cold start function


3.2 Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- ♦ Generator or Utility
- ♦ PV modules


Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

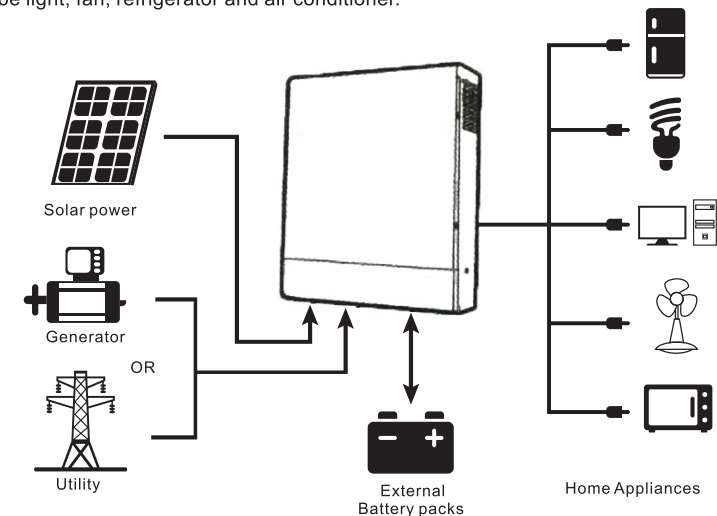


3.3 Product Overview

3.3.1 LCD Screen

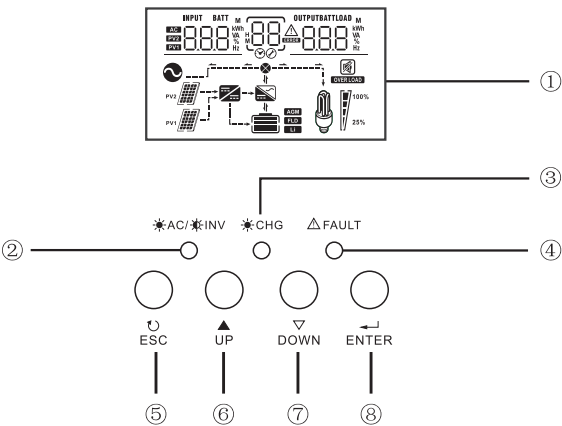


- 1.....LCD display
- 2.....Status indicator
- 3.....Charging indicator
- 4.....Fault indicator
- 5.....ESC
- 6.....UP
- 7.....DOWN
- 8.....ENTER

3.3.2 Back Panel

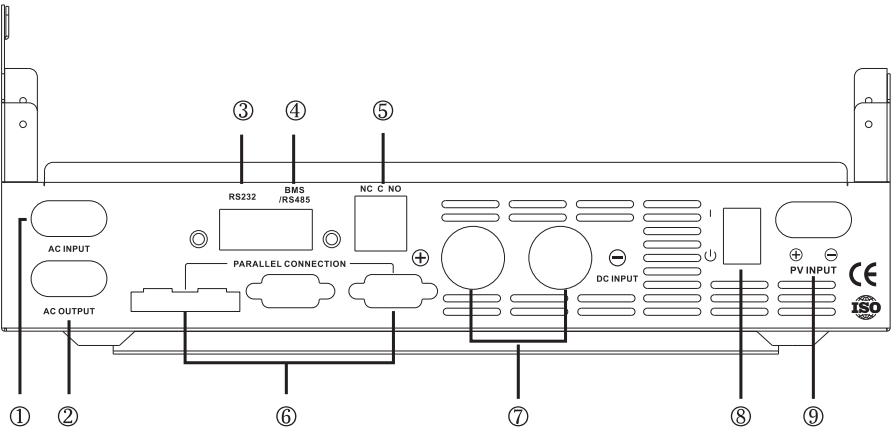


※ When to Equalize

In stage, when the setting equalization interval(battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

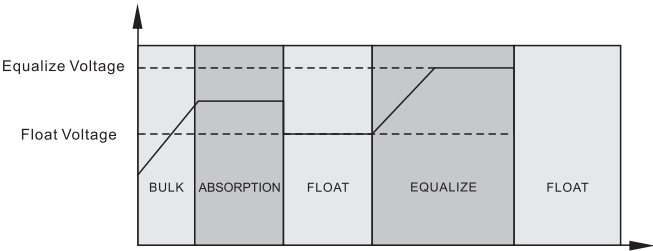


※ Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

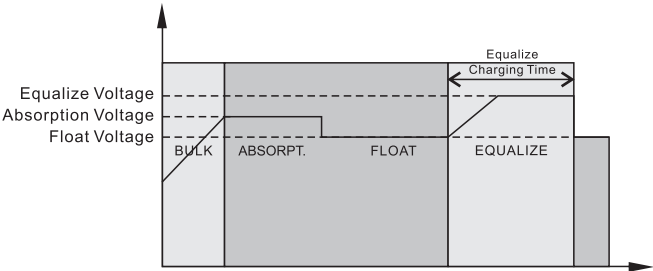

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

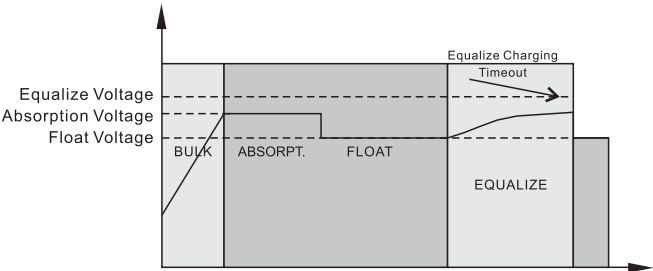

Communication Connection

Please use supplied communication cable to connect to inverter and PC. Please install a monitoring software on the computer.

Dry Contact Signal

There is one dry contact (3A/250VAC)available on the rear panel. It could be used to deliver signal to external device when battery voltage reaches warning level.

Unit Status	Condition			Dry contact port: NC C NO	
				NC & C	NO & C
Power Off	Unit is off and no output is powered.			Close	Open
Power On	Output is powered from battery or solar.	Normal mode	Battery voltage< Low DC warning voltage	Open	Close
			Battery voltage> Float charging voltage	Close	Open
		Solar first mode	Battery voltage< Solar to AC voltage	Open	Close
			Battery voltage> AC to DC voltage	Close	Open


5.4 Battery Equalization Description

Equalization function is added into charge controller, It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.



※ How to Apply Equalization Function


You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

- 1.Setting equalization interval in program 35.
- 2.Active equalization immediately in program 36.

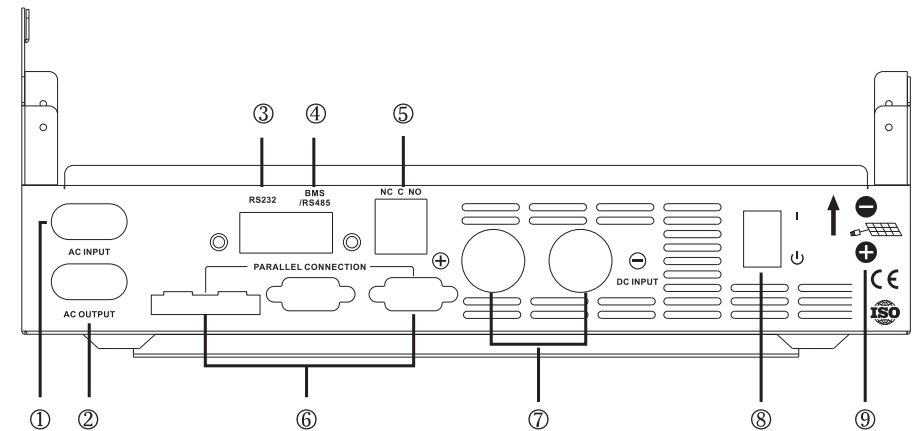

Dual Output Back Panel

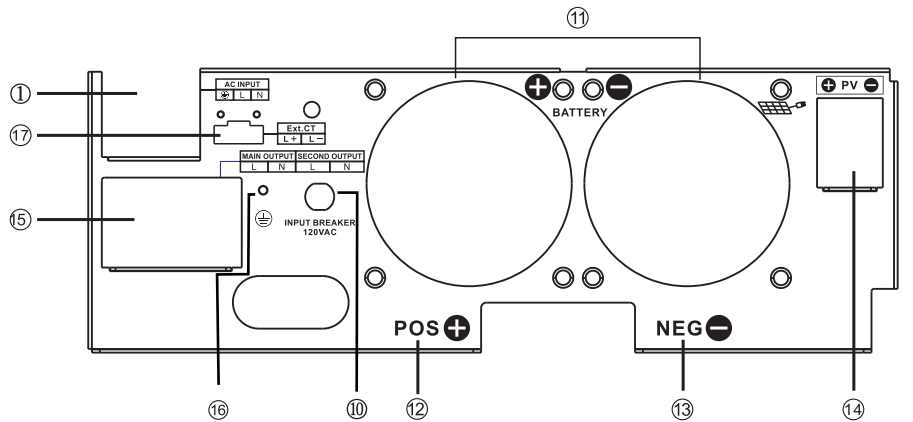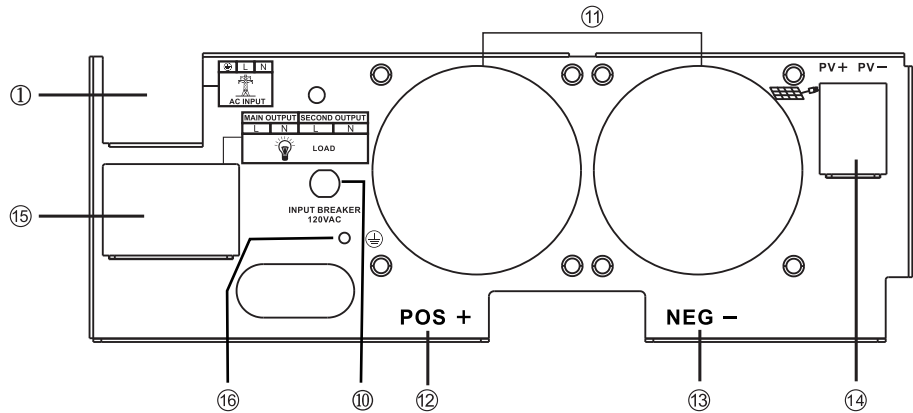

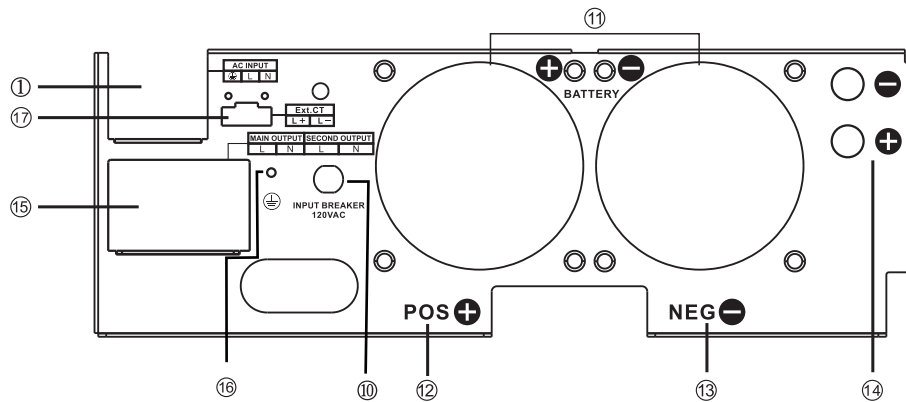

- | | |
|-----------------------------------|--------------------------------|
| 1.... AC Input | 10...Input Breaker |
| 2.... AC Output | 11...Fan |
| 3....Communication Port | 12...Battery Terminal Positive |
| 4....BMS/RS485 Communication Port | 13...Battery Terminal Negative |
| 5.....Dry Contact | 14...Solar Panel Input |
| 6.....Parallel connection | 15...AC Main/Second Output |
| 7.....Battery Input | 16...Output ground wire |
| 8.....Power ON/ OFF Switch | 17...CT Signal port |
| 9.....PV Input | |

4 INSTALLATION


4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ◆ The unit x 1
- ◆ User manual 1


4.2 Preparation

Before connecting all please take off bottom cover by removing two screws as shown below.

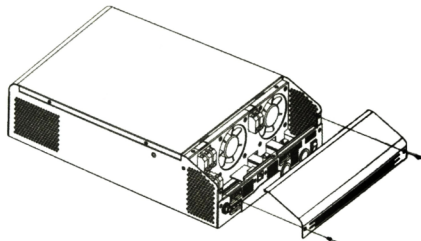

64	Dual battery SOC Receiver		If any type of lithium battery is selected in program 5. Default 50%, if the BMS capacity is higher than the SOC setting, the second output will be restored.
65	Setting discharge time on the second output		Setting range is disable and then from 0 min to 990 min. Increment of each click is 5 min. *If the battery discharge time achieves the setting time in program 61 and the program 60 function is not triggered, the output will be turned off.
66	Dual Recover Delay Time		The value ranges from 0-60min.
67	Output Open Time		The value ranges from 0 to 23.
68	Output Stop Time		The value ranges from 0 to 23.
71	Start time setting for power grid peak shaving		In PEC mode, set the start time and stop time for the battery to sell electricity according to requirements.
72	Stop time setting for power grid peak shaving		

When the BMS/485 communication interface is externally connected, as shown in the following figure:

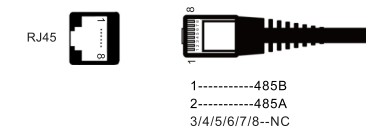


51	Time setting-Minute		For minute setting, the range is from 00 to 59.
52	Time setting-Hour		For hour setting, the range is from 00 to 23.
53	Time setting-Day		For day setting, the range is from 00 to 31.
54	Time setting-Month		For month setting, the range is from 1 to 12
55	Time setting-Year		For year setting, the range is from 16 to 99.
56	GRID-tie current		Increment of each click is 1A.
59	Max battery discharge current setting		When the battery discharge current more than the setting value, the unit will be alarm. The setting range is from 20 to 200.
60	Dual output		Use
61	Enter the dual output functional voltage point		If battery voltage lower than inverter setting, second output will be cutted of, Increment of each click is 0.1V.
62	Enter the dual output functional SOC point		If any type of lithium battery is selected in program 5. If BMS capacity lower than SOC setting, second output will be cutted of.
63	Dual battery voltage receiver		Default 52V/26V,if the battery voltage is higher than the inverter setting, the dual will be restored.

4.3 Mounting the Unit

Consider the following points before selecting where to install:

- ※ Do not mount the inverter on flammable construction materials.
- ※ Mount on a solid surface
- ※ Install this inverter at eye level in order to allow the LCD display to be read at all times.
- ※ For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- ※ The ambient temperature should be within the range of 20~35°C to ensure optimal operation.
- ※ The recommended installation position is to be adhered to the wall vertically.
- ※ Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

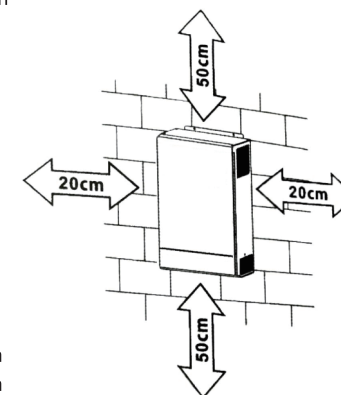

SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install the unit by screwing three screws.

- 1,2 Use the M6*80mm expansion bolts.
- 3 Use M4 or M5.



 
4.4 Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! All wiring must be performed by qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Ring terminal:




Recommended battery cable and terminal size:


Rated Capacity	Typical Amperage	Battery capacity	Wire Size	Ring Terminal			Torque value
				Cable(mm²)	Dimensions		
					D(mm)	L(mm)	
5.5KVA	127A	200AH	1*2AWG	34	6.4	39.2	2~3 Nm
			2*6AWG	14	6.4	33.2	

please follow below steps to implement battery connection:

1.Assemble battery ring terminal based on recommended battery cable and terminal size.

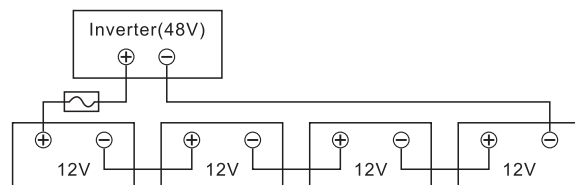

2. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals. Recommended tool: # 2 Pozzi Screwdriver

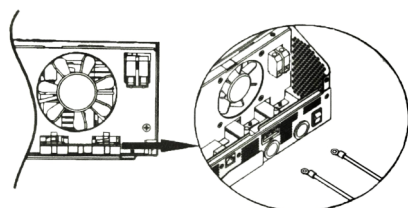

	WARNING: Shock Hazard Installation must be performed with care due to high battery voltage in series.
	CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive(+) must be connected to positive(+) and negative(-) must be connected to negative (-).

4.5 AC Input Output Connection

CAUTION!! Before connecting to AC input power source, please Install a separate AC breaker between inverter and AC input power source. This will ensure the Inverter can be disconnected during maintenance and fully protected from over current of AC input.

CAUTION! ! There are two terminal blocks with " IN " and " OUT " markings. Please do NOT mis-connect input and output connectors.

WARNING! All wiring must be performed by qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

39	Bat Soc Turn To Ac		If any type of lithium battery is selected in program 5. When the working mode of the inverter is set to the battery priority mode, the inverter will be forced to enter the mains charging when the SOC of the BMS is lower than the set value.
40	Bat Soc Turn To Dc		If any type of lithium battery is selected in program 5. When the working mode of the inverter is set to the battery priority mode, the inverter resumes the DC working mode when the SOC of the BMS is higher than the set value.
41	Bat Restart Soc		If any type of lithium battery is selected in program 5. When the inverter is turned on, the SOC must be higher than the set value to work normally.
45	Reset PV energy storage	Notre set (Default) 	Reset
46	Start charging time for AC charger	00:00(Default) 	The setting range of start charging time for AC charger is from 00:00 to 23:00, increment of each click is 1 hour.
47	Stop charging time for AC charger	00:00(Default) 	The setting range of scheduled Time for AC output on is from 00:00 to 23:00, increment of each click is 1 hour.
48	Scheduled time for AC output on	00:00(Default) 	The setting range of scheduled Time for AC output off is from 00:00 to 23:00, increment of each click is 1 hour.
49	Scheduled time for AC output off	00:00(Default) 	The setting range of scheduled Time for AC output off is from 00:00 to 23:00, increment of each click is 1 hour.

30	Battery equalization	Battery equalization 30 EEN	Battery equalization disable (default) 30 EdS
		If "Flooded" or "User Defined" is selected in program05, this program can be setup.	
31	Battery equalization voltage	48V system default setting:58.4V E4 31 58.4 ^{BATT}	
		Setting range is from 48.0V to 60.0V for 48V system. Increment of each click is 0.1V.	
33	Battery equalized time	60min (default) 33 60	Setting range is from 5min to 900min. Increment of each click is 5min.
34	Battery equalized timeout	120min (default) 34 120	Setting range is from 5min to 900min. Increment of each click is 5min.
35	Equalization interval	30days (default) 35 30d	Setting range is from 0 to 90 days. Increment of each click is 1 day.
36	Equalization activated immediately	Enable 36 AEN	Disable (default) 36 AdS
		If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will show "EQ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, "EQ" will not be shown in LCD main page.	
37	BMS Function Switch	off(default) bns 37 OFF	Whether to enable the BMS communication function
		bns 37 ON	
38	Bat Soc Under Lock	bSU 38 10 ^{BATT} %	If any type of lithium battery is selected in program 5. BMS low voltage SOC value, if the BMS SOC value is lower than the set value, the inverter will shut down to protect the battery.

Suggested cable requirement for AC wires

Rated Capacity	Gauge	Torque value
5.5KVA	8AWG	1.4~1.6Nm


Please follow below steps to implement AC input/ output connection

1. Before making AC input/output connection be sure to open DC protector or disconnect first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor(⊕)first.

⊕→Ground(yellow-green)

L→LINE(brown or black)

N→Neutral (blue)

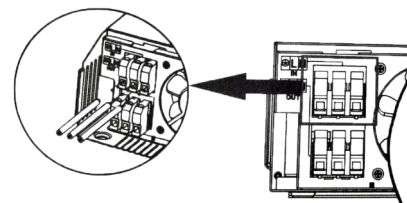

WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Make sure the wires are securely connected

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/ charger will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

4.6 PV Connection

PV Connection(Only apply for the model with solar charger)

CAUTION:Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Typical Amperage	Gauge	Torque Value
30A	12AWG	1.4~1.6Nm

PV module selection:

When choosing the right PV module, be sure to first consider the following requirements:



The open circuit voltage (Voc) of the PV modules does not exceed the maximum PV array open circuit voltage of the inverter. The maximum supply voltage of the PV modules should be close to the optimal PV access voltage range of the inverter for best performance. If one PV module cannot meet this requirement, it is necessary to connect multiple PV modules in series.

Model	MF4855U
PV Charging Mode	MPPT
MAX.PV Input Power	8500W
MPPT Tracking Range	60-500Vdc
Best Voltage	360-430V
MAX.PV Input Voltage	500Vdc
PV Max Input Current	27A
MAX.PV Charging Current	100A
MAX.AC Charging Current	40A
MAX.Charging Current	100A

PV Module Wire Connection

Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool
3. Fix wire cover to the inverter with supplied screws as shown in below chart.

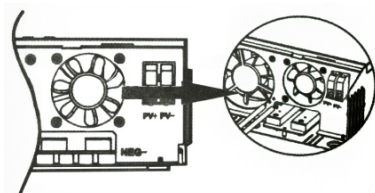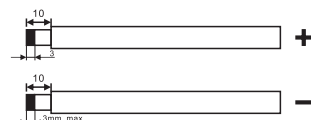


4. Check correct polarity of wire from PV modules and PV input connectors. Then, connect positive pole(+) of connection wire to positive pole(+) of PV input connector. Connect negative pole(-) of connection wire to negative pole(-) of PV input connector. Screw two wires tightly in clockwise direction. Recommended tool: 4mm blade screwdriver.

23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) 23 byd	Bypass enable 23 byE
24	Battery low voltage • If battery power is only power source available inverter will alarm.	Battery low voltage 44.0V LOV 24 44.0 ^v Setting range is from 40.0V-54.0V for 48V system.	
25	Record fault code	Record enable (default) 25 FEN	Record disable 25 FdS
26	Bulk charging voltage (C.V voltage)	48V system default setting: 56.4V CV 26 56.4 ^v If self-defined is selected in program 5, this program can be set up. Setting range is from 48.0V to 60.0V for 48V system. Increment of each click is 0.1V.	
27	Floating charging voltage	48V system default setting: 54.0V FLV 27 54.0 ^v	
28	Reset factory setting	default: Std 28 OFF Std 28 ON	
29	Low DC cut-off voltage: • If battery power is only power source available inverter will shut down. • If PV energy and battery power are available, inverter will charge battery without AC output.	48V system default setting: 42.0V COV 29 42.0 ^v If self-defined is selected in program 5, this program can be set up. Setting range is from 40.0V to 52.0V for 48V system. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	

16	Charger source priorit: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode,charger source can be programmed as below:	
		Solar first 16 C50	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility(default) 16 SNU	Solar energy and utility will charge battery at the same time.
		Only Solar 16 050	Solar energy will be the only charger source no matter utility is available or not.
		Solar residual 16 50t	Solar energy will support. all connected loads as first priority, the residual energy will charge battery
		If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
17	Battery restore voltage	default: 17 53.5 ^{BATT}	If battery type in "USE" mode,when the machine will restart and resume operation until the PV charging reaches the set value after the battery is low and the device shuts down.
18	Alarm control	Alarm on (default) 18 60n	Alarm off 18 60f
19	Auto return to default display screen	Return to default display screen (default) 19 ESP	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 19 LEP	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 20 LON	Backlight off 20 LOF
22	Beeps while primary source is interrupted	Alarm on (default) 22 AON	Alarm off 22 AOF


4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

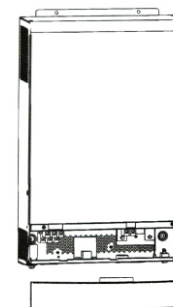

5 OPERATION

 5.1 Power ON/OFF



Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

5.1.1 Steps to start up

Connect the battery that meets the requirements (battery voltage needs to be beyond 23V) or AC (AC needs to confirm the suitable input range depend on the output mode), then you can start up the inverter.

➤ Mains power on

Connect to normal AC power, press the switch, the system will automatically turn on. If you set AC output power priority, after waiting for a period of time, the panel will display AC mode that represents turn on the machine successfully, then will enter the AC mode.

When the normal mains power is connected and press the power-on button then the system will automatically power on. If it is set as AC output priority, after a period of time, the panel will display the AC mode to indicate that the power-on is complete and enter the AC mode.

➤ Battery boot

Connect to battery, press the power-on button to establish a working power source.


The system will automatically turn on, after waiting for a period of time, the panel will display battery mode that represents turn on the machine successfully, then will enter the battery mode.

5.1.2 Shutdown steps

When the system is in battery mode or AC mode output, press the switch again, then the system will be turned off.

5.2 Operation and Display Panel

The operation and display panel, shown in below chart , is on the front panel of the inverter. It includes three indicators , four function keys and a LCD display, indicating the operating status and input/output power information.

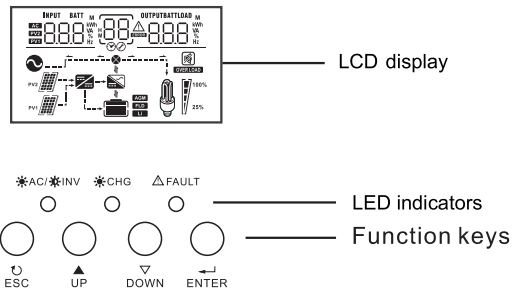


LED Indicator

LED Indicator			Messages
AC/INV	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
CHG	Yellow	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

Function Keys


Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

LCD Display Icons

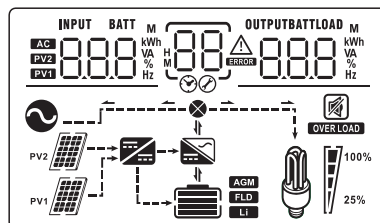

06	Auto restart when overload occurs	Restart disable(default) 06 Lfd	Restart enable 06 LfE
07	Auto restart when over temperature occurs	Restart disable (default) 07 Lfd	Restart enable 07 LfE
08	ECO function: System will temporarily stop when the load is low in battery mode.	disable(default) ECO 08 Sds	enable ECO 08 SEN
09	Output frequency	60Hz(default) 09 60 Hz	50Hz 09 50 Hz
10	Output voltage	120V(default) 10 120 v	110V 10 110 v
11	Maximum utility charging current Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger.	30A(default) 11 30A	Setting range is 2A, then from 10A to max.AC charging current. Increment of each click is 10A.
12	Setting voltage point back to utility source when selecting“SBU priority” in program 01.	Available options in 48 system model:	
		46V (default) 12 BATT 46 v	Setting range is from 44V to 51V. Increment of each click is 1V.
13	Setting voltage point back to battery mode when selecting“SBU priority” in program 01.	Available options in 48 system model:	
		Battery fully charged 13 BATT FUL	54V (default) 13 BATT 540 v
		Setting range is from 48V to 58V. Increment of each click is 1V.	

02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	60A(default) 	Setting range is from 10A to maximum charging current. Increment of each click is 10A.
03	AC input voltage range	Appliances (default) 	If selected, acceptable AC input voltage range will be within 65-145VAC.
		UPS 	If selected, acceptable AC input voltage range will be within 95-145VAC.
05	Battery type	AGM (default) 	Flooded
		User-Defined 	If "User-Defined" is selected, battery charge voltage, low DC cut-off voltage and dual cut-off voltage can be set up in program 24,26,27,29 and 61.
		LIA-protocol compatible battery 	If selected, programs of 24,26,27 and 29 will be automatically set up. No need for further setting.
		Pylontech battery 	
		Techfine battery 	
		Growatt battery 	
		Felicity battery 	
		LIB-protocol compatible battery 	Select "LIB if using Lithium battery compatible to Lib protocol. If selected, programs of 26,27 and 29 will be automatically set up. No need for further setting.
		3 rd party lithium battery 	If selected, programs of 26,27 and 29 will be automatically set up. No need for further setting. Please contact the battery supplier for installation procedure.

 Icon	Function			
Input source information				
	Indicates the AC input			
	Indicates the 1 st PV panel input			
	Indicates the 2 nd PV panel input			
Left digital display information				
	Indicate input voltage, input frequency, battery voltage, PV1 voltage, PV2 voltage, charger current			
Middle digital display information				
	Indicates the setting programs.			
	Indicates the warning and fault codes.			
	Warning: Flashing  with warning code Fault: display  with fault code			
Right digital display information				
	Indicate the output voltage, output frequency, load percent, load VA, load W, PV1 charger power, PV2 charger power, DC discharging current.			
Battery information				
	Indicates battery level by 0-24%,25-49%,50-74% and 75-100% and charging status.			
	Indicates the battery type: AGM, Flooded or Li-defined battery.			
Load information				
	Indicates overload.			
	Indicates the load level by 0-24%,25-50%,50-74%,and 75-100%.			
	0%~25%	25%~50%	50%~75%	75%~100%
				
Mode operation information				
	Indicates unit connects to the mains.			
	Indicates unit connects to the 1 st PV panel			
	Indicates the solar charger is working			
	Indicates the DC/AC inverter circuit is working.			
Mute operation				
	Indicates unit alarm is disabled.			

Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, charging current, battery voltage, output voltage, output frequency, load percentage, load in Watt, load in VA, load in Watt, DC discharging current, main board firmware version and SCC firmware version.


Select item	LCD display
Input voltage and output voltage (Default Display Screen)	Input Voltage=120V, output voltage=120V
Input frequency and output frequency	Input frequency=60.0Hz, output frequency=60.0Hz
Battery voltage and output voltage	Battery Voltage=48.0V, output voltage=120V
Battery voltage and load percentage	Battery Voltage=48.0V, load percentage 68%



5.3 LCD Setting






After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button exit.


Setting Programs:

Program	Description	Selectable option
00	Exit setting mode	Escape
01	Output source priority selection	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.
		Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12 or solar and battery is not sufficient.
		If solar energy is sufficient to all connected loads and charge battery, the solar energy could feedback to the grid (sell power to grid). If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.
		The units will not only provide power to the connected load but also give power to connected home load. If PV power and battery power is insufficient, it will take grid energy as supplement. The units will not sell power to grid. It will reduce the power of the inverter only to supply the local load, charge battery and home load.

 Line mode	Output power from utility. Charger available	PV energy, battery power and utility provide power to load. 
	Output power from utility. Charger available	PV energy and utility charge battery, and utility provides power to load. 
		PV energy charges battery, utility and PV energy provide power to the load. 
		PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid. 
Battery mode	Output power from battery or PV	PV energy and battery energy supply power to the load. 
		The PV energy power to the load and has remaining energy to charge the battery 
		Battery provides power to the load. 
Only PV mode	Output power from PV	PV provides power to the load. 

  Battery voltage and load in VA	Battery Voltage=48.0V, load in VA=1.08kVA 
Battery voltage and load in Watt	Battery Voltage=48.0V, load in Watt=1.88kW 
PV1 voltage and PV1 charger power	PV1 Voltage=360V, charging power=1.58kW 
Charger current and DC discharging current	Charging current=30A, discharging current=0A 
PV energy generated today	Today energy = 6.3kWh 

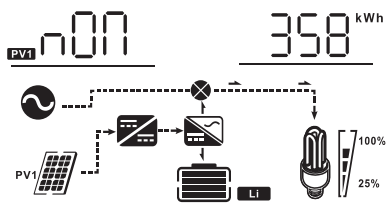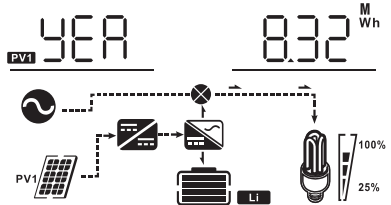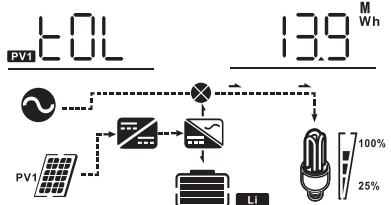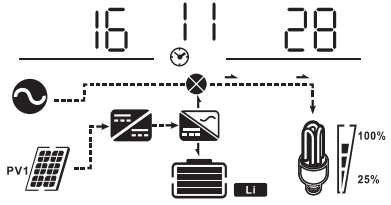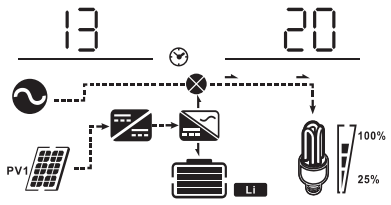PV energy generated this month	This month energy = 358kWh. 
PV energy generated this year	This year energy = 8.32MWh 
PV energy generated totally	Total energy = 13.9MWh 
Real date	Real date Nov 28, 2016. 
Real time	Real time 13: 20. 

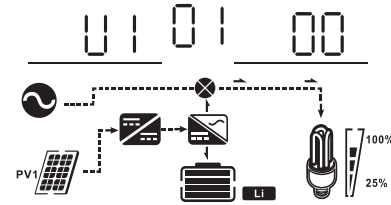Main board firmware version	Version 00001.00 
-----------------------------	---

Operating Mode Description

Operating mode	Behaviors	LCD display
Standby mode Note: *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output. *Power swing mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.	No output power, solar or utility charger available	Battery is charged by utility. 
		Battery is charged by PV energy. 
		Battery is charged by utility and PV energy. 
		Battery is charged by PV energy and supplies power to the public grid. 
		No charging. 
Line mode	Output power from utility. Charger available	Utility charges battery and provides power to load. 
		Utility and battery power provide power to load. 